



Belco
Resources
Equipment
Rocky Mount, NC

Hay Tedder

BHT-17M & BHT-17H

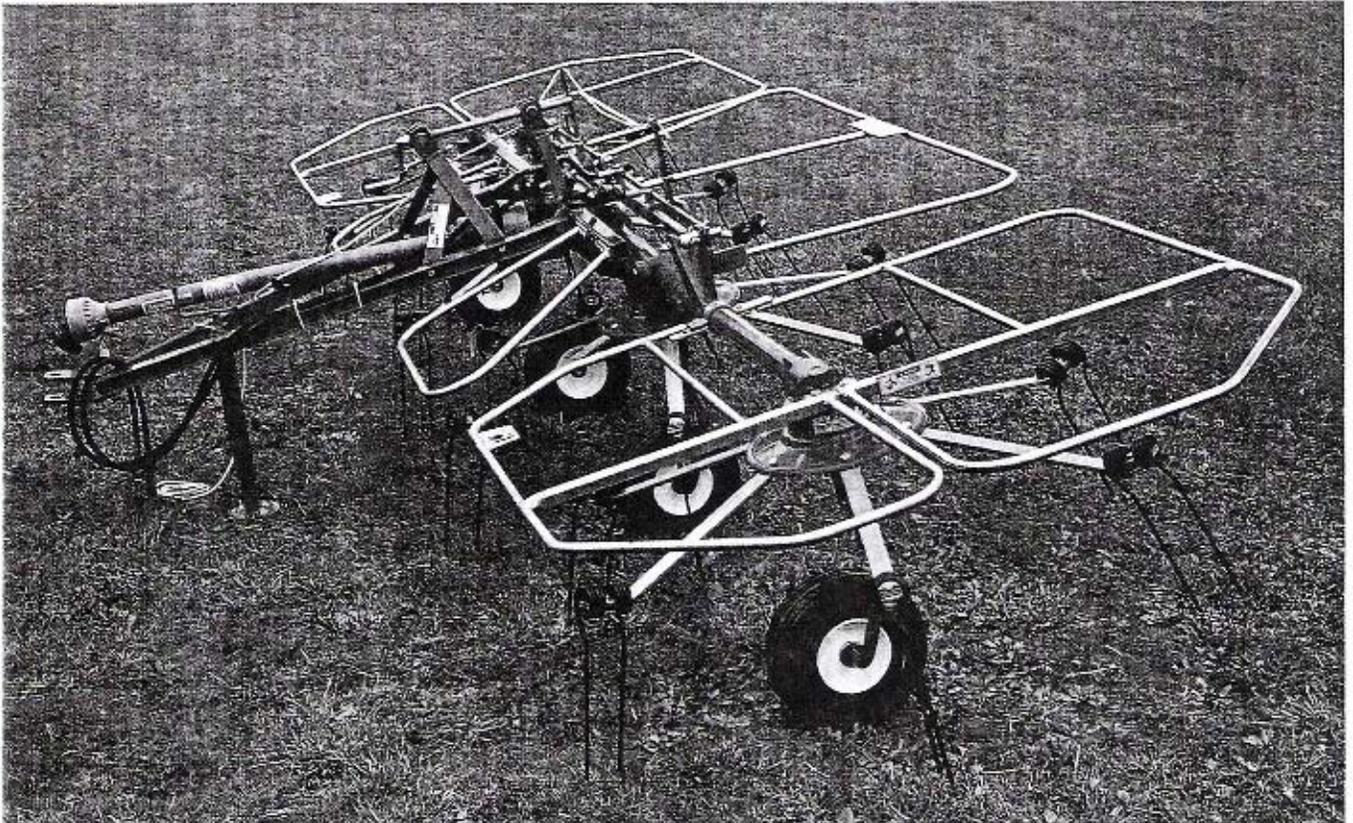

ASSEMBLY INSTRUCTIONS FOR PULL TYPE MODELS G4L - G4LPE

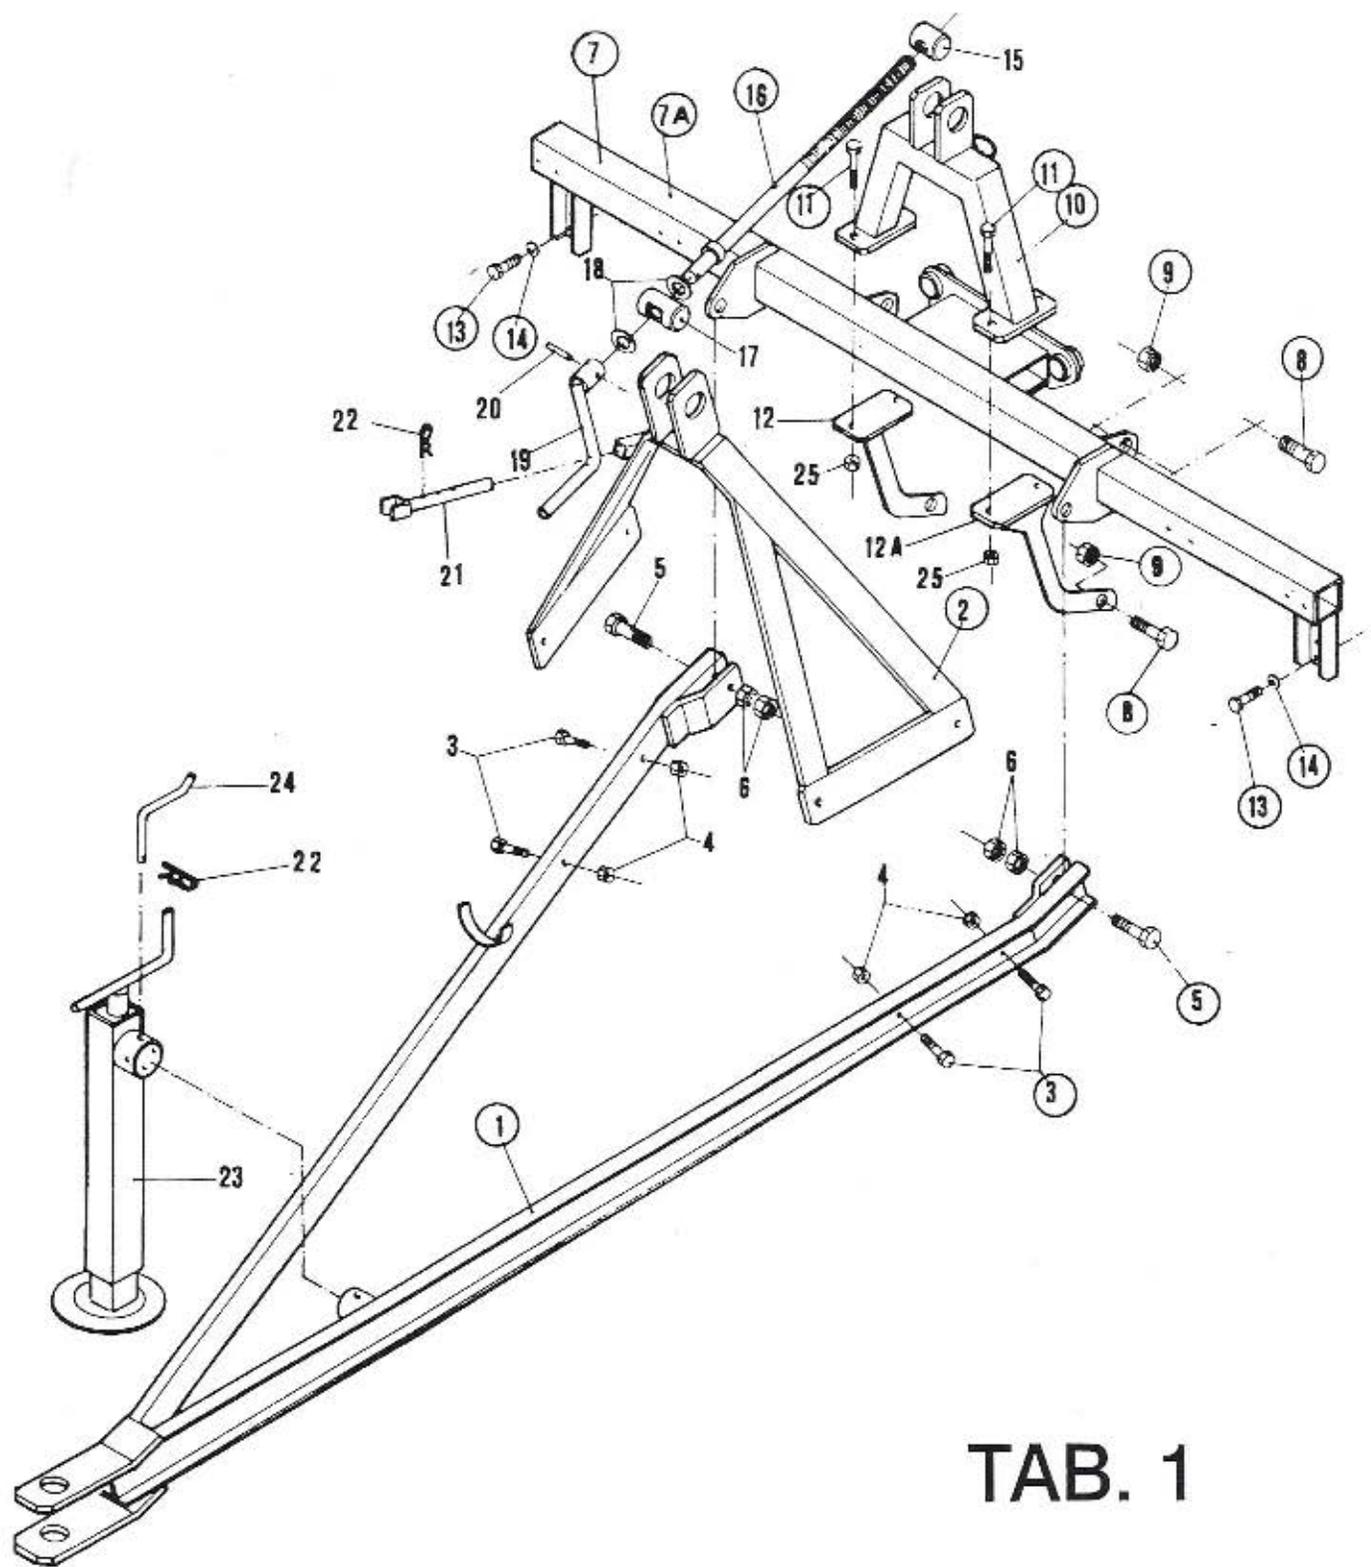

TAB. 1


- 1) Turn main body over (A. Tab. 3) and install wheel spindle (N° 32 and 44, Tab. 3) and fasten with roll pin 10 x 60, (N° 31, Tab. 3).
- 2) Turn tedder on rear side.
- 3) Mount support (N° 10, Tab. 1) and two brackets (N° 12 right and N° 12/A left, Tab. 1) fasten with screws TE12x190 (N° 11, Tab. 1) and screws TE 18x55 (N° 8, Tab. 1).
- 4) Mount P.T.O. protection shield (N° 88, Tab. 3) and fasten tight with clamp (N° 87, Tab. 3).

G4L - G4LPE TAB. 1 - Code 19010190

Spare Parts Code	Pos.	Description	Models - Reference
12590102	01	Drawbar	G4L-G4LPE
12590103	02	Adjustment screw support	G4L-G4LPE
3011255	03	Screw TE 12 x 30	G4L-G4LPE
3020202	04	Self locking nut M 12	G4L-G4LPE-G2P-G2LP - G4LP-UJ
3011200	05	Screw TE 18 x 60	G4L-G4LPE - G4LP-UJ
3020334	06	Nut 18 MA	G4L-G4LPE
18030667	07	Cross drawbar L. 1350	G4L
18030668	07A	Cross drawbar L. 1490	G4LPE
3011218	08	Screw 18 x 55	G4L-G4LPE-G2P-G2LP
3020214	09	Self locking nut 18 MA	G4L-G4LPE-G2P-G2LP - G4LP-UJ
12590104	10	Support for pull bar tedder	G4L-G4LPE
3011276	11	Screw TE 12 x 90	G4L-G4LPE
18030695	12	Fastening brackets 60 x 10 R.	G4L-G4LPE
18030696	12A	Fastening brackets 60 x 10 L.	G4L-G4LPE
3011268	13	Screw TE 12 x 20	G4L-G4LPE
3030177	14	Lock. washer M 12	G4L-G4LPE
12880501	15	Split nut 24 MA Ø 35 L. 55	G4L-G4LPE
12880503	16	Adjustment screw	G4L-G4LPE
12880502	17	Split nut Ø L. 55	G4L-G4LPE
12280003	18	Washer Ø 20 x 30 x 0,5	G4L-G4LPE
18030697	19	Crank	G4L-G4LPE
3080109	20	Roll pin Ø 6 x 30	G4L-G4LPE
18030691	21	Crank holder	G4L-G4LPE-G2P-G2LP - G4LP-UJ
3040201	22	Clip pin 3 x 60	G4L-G4LPE-G2P-G2LP - G4LP-UJ
17020129	23	Jack	G4L-G4LPE
12120104	24	Pin 15 x 200	G4L-G4LPE
3020202	25	Self locking nut M 12	G4L-G4LPE-G2P-G2LP - G4LP-UJ

- 5) Mount adjustment screw support (N° 2, Tab. 1) on drawbar (N° 1, Tab. 1) and fasten with screws TE 12 x 25 (N° 3, Tab. 1).
- 6) Install on support crank adjustment screw (N° 16, Tab. 1) and then connect drawbar (N° 1, Tab. 1) to cross drawbar (N° 7A, Tab. 1) and fasten with screws TE 18 x 60 (N° 5, Tab. 1) and nuts (N° 6, Tab. 1).
N.B. do not overtighten, then secure with jam nut.
- 7) Mount jack foot support (N° 23, Tab. 1) and turn crank (N° 19, Tab. 1) so that rotors tilt forward in order to ensure maximum stability to tedder in parking position.
- 8) Install wheels on lateral wings.
Important: Be sure wheels face inward with wheel spindles angled forward toward front of machine. (See table 3)
- 9) Mount two lateral arms, right and left, (N° 13, 13/B, 13/C, 13/A, Tab. 3) and fasten with two pins Ø 25 x 220 (N° 14, Tab. 3).
N.B. Left and right lateral arms have been marked with respective decals.
- 10) Working operations for pull type models G4L-G4LPE
Once in field lower two lateral rotors, adjust rotors using crank N° 19, Tab. 1 so front teeth of rotors are 3-4 cm (1-1 1/2 inches) from ground level.

ASSEMBLY INSTRUCTIONS FOR 3° POINT HITCH MODELS G4L - G4LPE

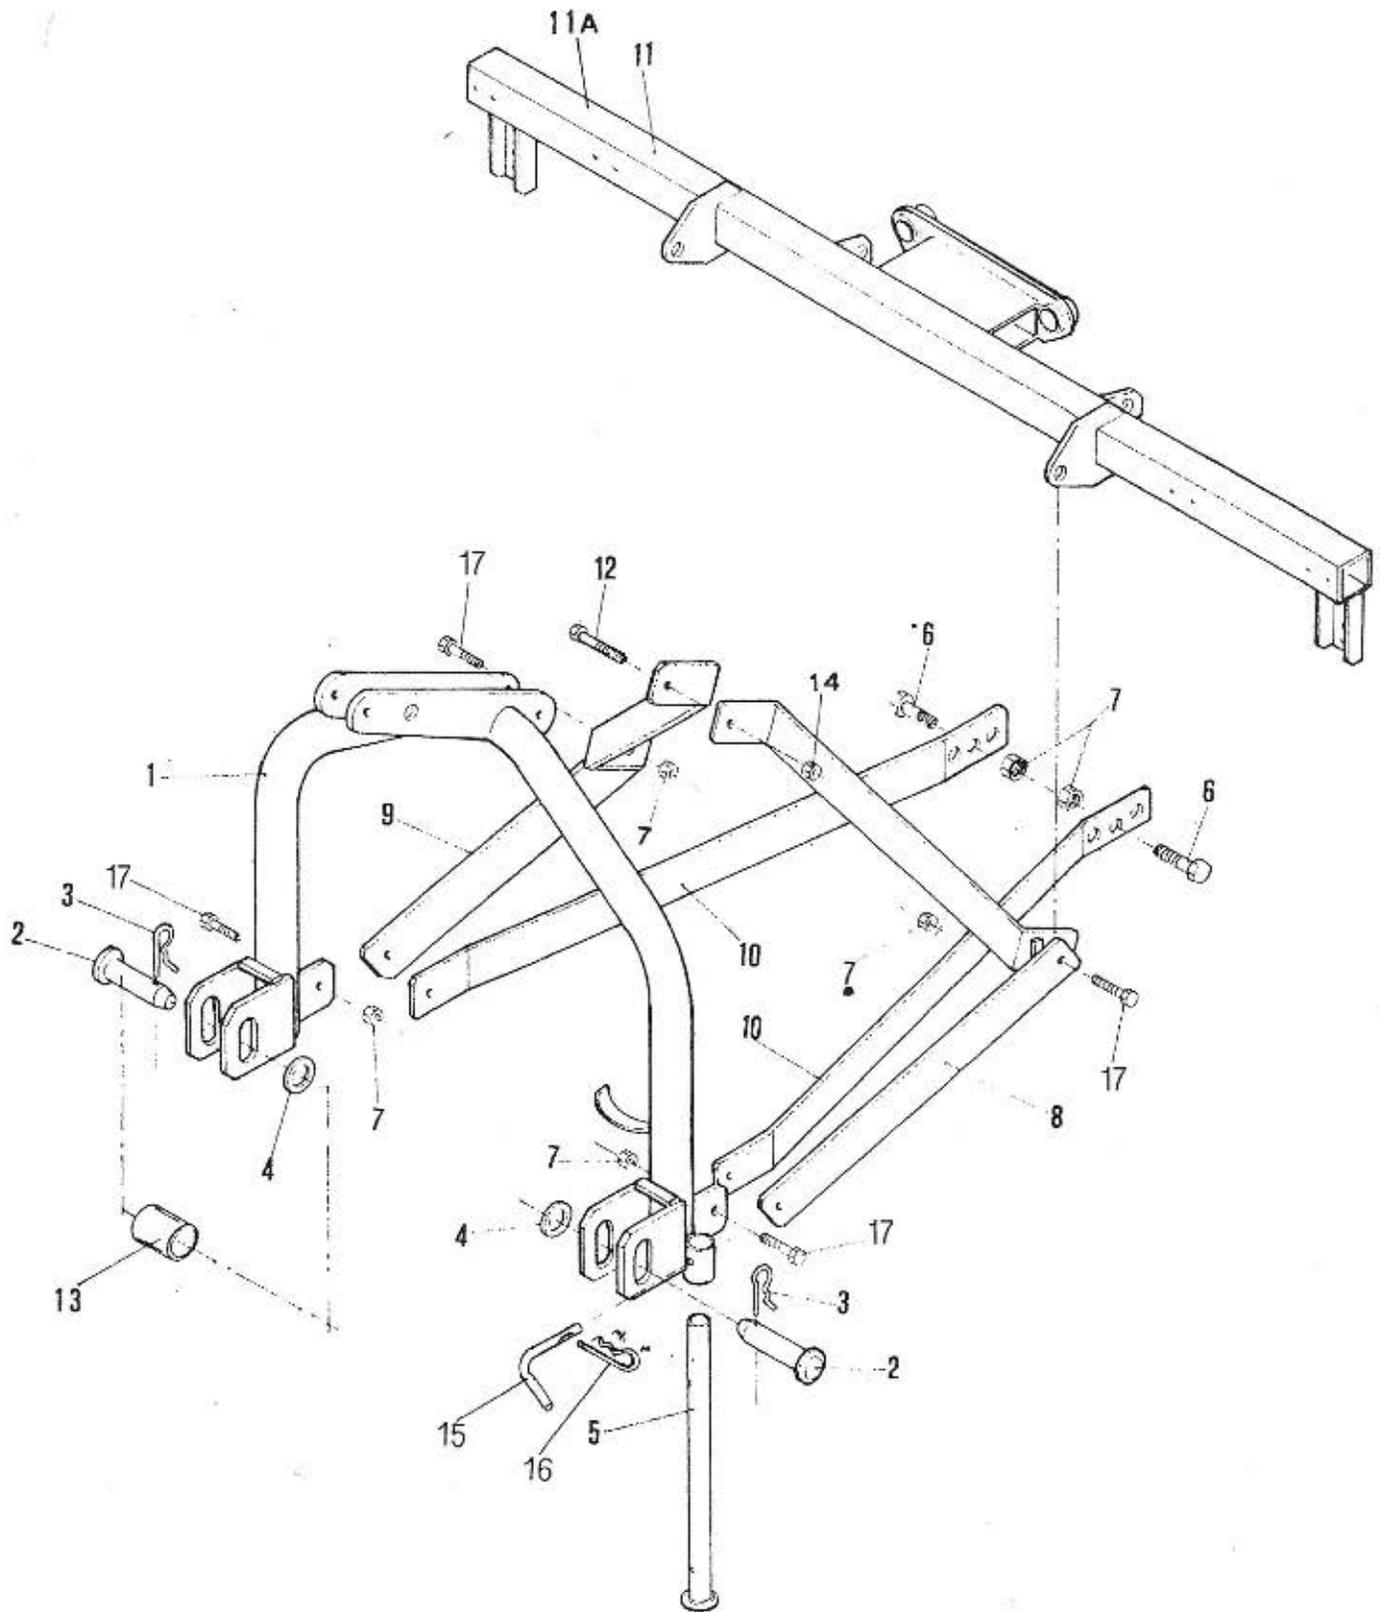

TAB. 2

G4L - G4LPE TAB. 2 - Code 19010191

Spare Parts Code	Pos.	Description	Models - Reference
18030646	01	Transport frame	G4L-G4LPE-G2P-G2LP - G4LP-UJ
12880513	02	Arms attachment pin	G4L-G4LPE-G2P-G2LP - G4LP-UJ
3040202	03	Split pin R 5 x 100	G4L-G4LPE-G2P-G2LP - G4LP-UJ
3030176	04	Flat washer Ø 22	G4L-G4LPE-G2P-G2LP - G4LP-UJ
18030618	05	Jack support Ø 42,4 L. 710	G4L-G4LPE - G4LP-UJ
3011218	06	Screw T.E. 18 x 55	G4L-G4LPE-G2P-G2LP - G4LP-UJ
3020214	07	Self locking nut 18 MA	G4L-G4LPE-G2P-G2LP - G4LP-UJ
18030698	08	Left attachment bar	G4L-G4LPE - G4LP-UJ
18030699	09	Right attachment bar	G4L-G4LPE - G4LP-UJ
18030600	10	Height adjustment bar	G4L-G4LPE - G4LP-UJ
18030667	11	Cross drawbar L. 1350	G4L
18030668	11A	Cross drawbar L. 1490	G4LPE
3011295	12	Screw TE 16 x 130	G4L-G4LPE-G2P-G2LP
12920101	13	(2nd cat.) Bushing for pin	G4L-G4LPE-G2P-G2LP - G4LP-UJ
3020204	14	Self locking nut 16 MA	G4L-G4LPE-G2P-G2LP - G4LP-UJ
12120104	15	Pin Ø 15 L. 200	G4L-G4LPE - G4LP-UJ
3040201	16	Split pin R 3 x 60	G4L-G4LPE - G4LP-UJ
3011200	17	Screw T.E. 18 x 60	G4L-G4LPE - G4LP-UJ

1) Mount to cross drawbar (N° 11, Tab. 2), left and right attachment bars (9 and 8, Tab. 2) and fasten with screws TE 18 x 55 (N° 6, Tab. 2).

2) Connect transport frame (N° 1, Tab. 2) and height adjustment bars (N° 10, Tab. 2). Height adjustment bars (N° 10, Tab. 2) must be placed in central part of frame and fasten with screws TE 18 x 55 (N° 6, Tab. 2) and screws TE 16 x 30 (N° 12, Tab. 2).

N.B. Before overtightening self-locking nuts be sure to have completed assembly of all parts.

3) Mount jack foot support (N° 5, Tab. 2) and tilt rotors forwards to ensure major stability to tedder in parking station.

4) The three point hitch model is fitted with pivoting wheels (N° 84, Tab. 4), Fig. A therefore before starting tedding operations remember to pull back lock handles (N° 80, Tab. 4), in order to unblock wheels.


5) Connect the two lower hitch points of transport arch to the two lower arms of tractor and fasten upper link to 3 point hitch arm. Connect P.T.O. shaft to tractor P.T.O.

We recommend that shaft should slide out about 5-10 cm (2-4 inches) after two P.T.O. Joints are connected.

6) **Working operations for three point hitch model**

Make sure that before starting to work, front teeth of rotors are 3-4 cm (1-1 1/2 inches) from ground level. This is done by adjusting the upper link of the three point hitch and not by using the hydraulics of tractor.


TAB. 4

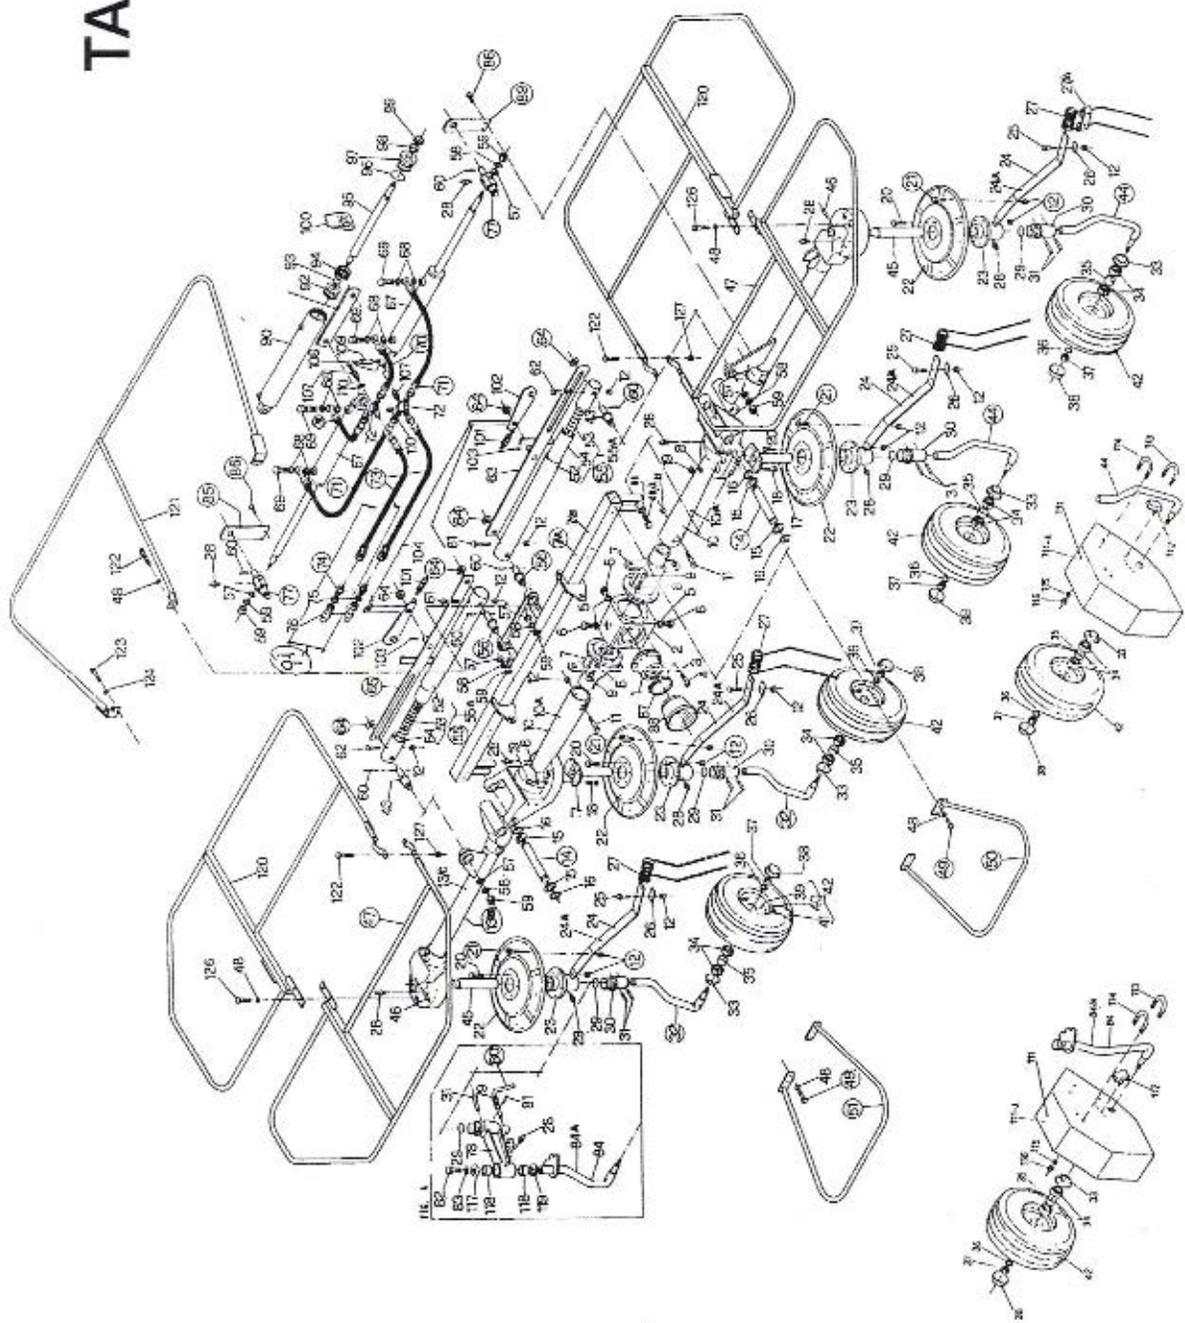

GENERAL SPARE PARTS

Spare Parts Code	Pos.	Description	Models - Reference
18030657	001	Central gear box coupling	G4L-G4LPE-G2P-G2LP
18030623	002	Central gear box	G4L-G4LPE-G2P-G2LP
3030704	003	Lock washer Ø 8	G4L-G4LPE-G2P-G2LP
3010606	004	Screw T.C.C.E.I. M8 x 20	G4L-G4LPE-G2P-G2LP
3030408	005	Copper washer 14	G4L-G4LPE-G2P-G2LP
3010232	006	Screw TE M 14 x20	G4L-G4LPE-G2P-G2LP
18030666	007	Gearbox attachment ARM	G4L-G4LPE
18030667	007A	Cross drawbar L. 1350	G4L
18030668	007B	Cross drawbar L. 1490	G4LPE
3030703	008	Lock washer Ø 12	G4L-G4LPE-G2P-G2LP
3010607	009	Srew T.C.C.E.I. M. 12 x 25	G4L-G4LPE-G2P-G2LP
18030669	010	Gearbox attachment ARM	G4L
18030670	010A	Gearbox attachment ARM	G4LPE
3011204	011	Screw T E 12 x 110	G4L-G4LPE
3020202	012	Self locking nut M 12	G4L-G4LPE-G2P-G2LP
18030671	013	Left lateral ARM	G4L
18030672	013A	Left lateral ARM	G4LPE
18030673	013B	Right lateral ARM	G4L
18030674	013C	Right lateral ARM	G4LPE
12880510	014	Arms pin Ø 25 x 220	G4L-G4LPE
3030203	015	Fifth wheel 25 x 35 x 1,5	G4L-G4LPE
3120127	016	Seeger E 25	G4L-G4LPE
12590201	017	Wheel supp. bracket pin 35 x 15	G4L-G4LPE
3011291	018	Screw TE 12 x 55	G4L-G4LPE
3020202	019	Self locking nut M 12	G4L-G4LPE-G2P-G2LP
3010601	020	Screw T.C.C.E.I. 12 x 50	G4L-G4LPE-G2P-G2LP
3011241	021	Screw T E 12 x 30	G4L-G4LPE-G2P-G2LP
18030643	022	Arm. link flange	G4L-G4LPE-G2P-G2LP
18030619	023	Crown coupling	G4L-G4LPE-G2P-G2LP
18030620	024	Spring holder ARM	G4LPE-G2LP
18030624	024A	Spring holder ARM	G4L
3011297	025	Screw T E 12 x 45	G4L-G4LPE-G2P-G2LP
18030627	026	Spring clamp	G4L-G4LPE-G2P-G2LP
18030616	027	Spring	G4L-G4LPE-G2P-G2LP
18030644	027A	Tooth safety clamp	G4L-G4LPE-G2P-G2LP
3090101	028	Greaser 8 MB	G4L-G4LPE-G2P-G2LP
10010604	029	O-ring 44,45 x 3,53	G4L-G4LPE-G2P-G2LP
12880509	030	Fixed wheel axle bush	G4L-G4LPE-G2P-G2LP
3080128	031	Spring pin Ø 10 x 60	G4L-G4LPE-G2P-G2LP

TAB. 4

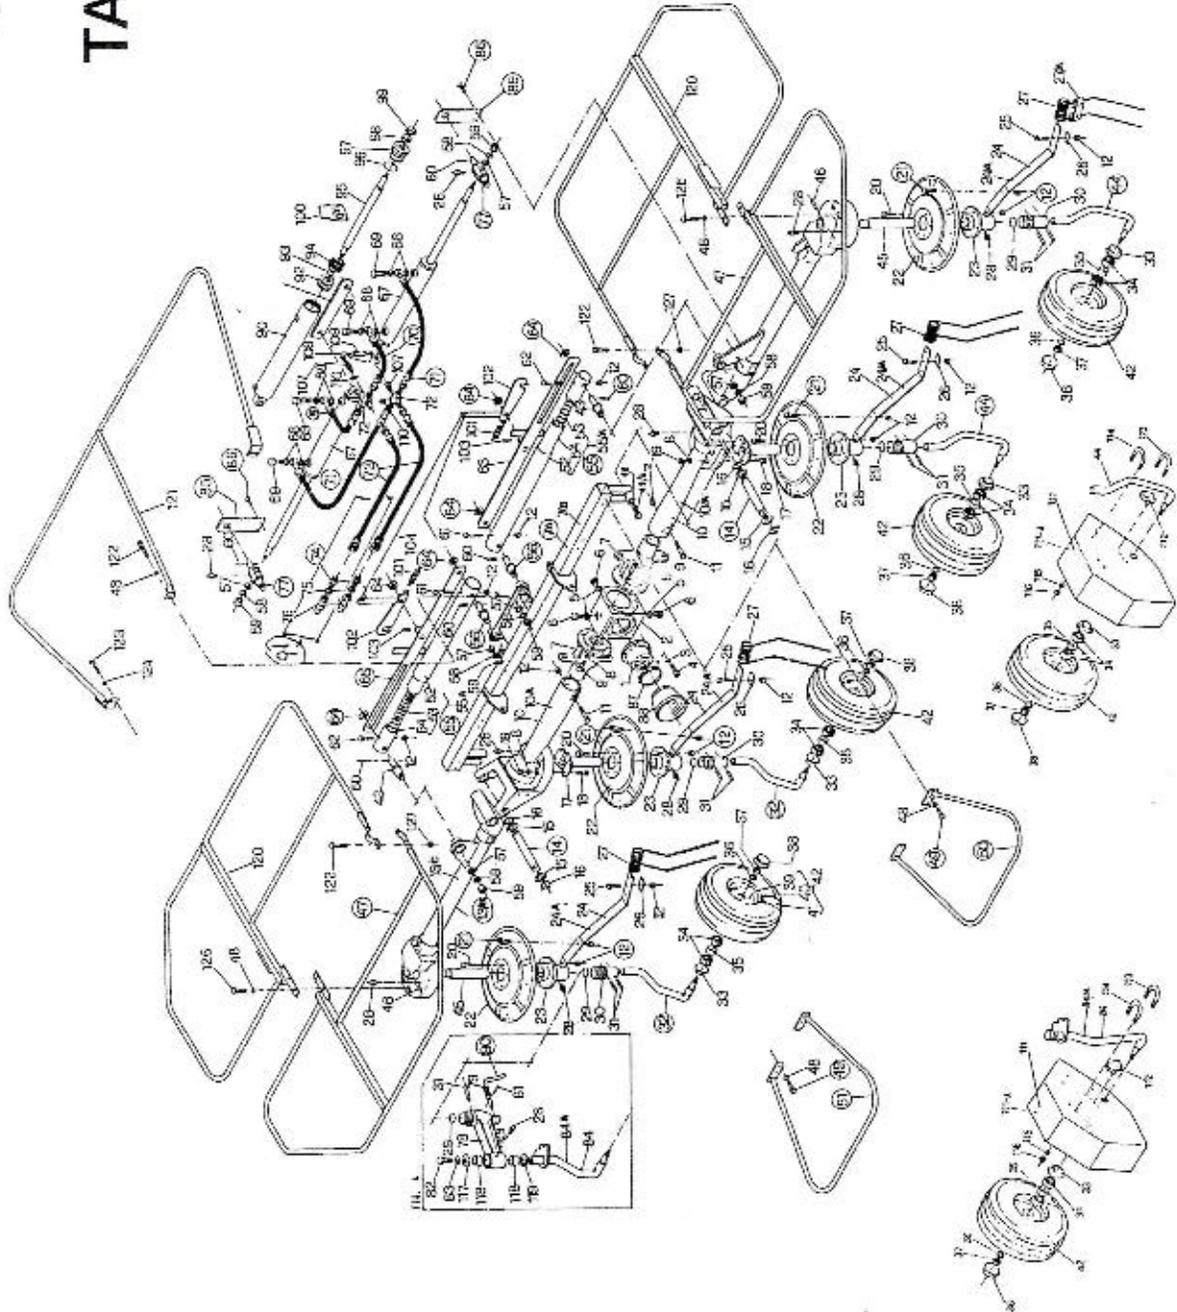


G4L - G4LPE TAB. 4 Code 19010188

Spare Parts Code	Pos.	Description	Models - Reference
18031507	032	Right wheel axle	G4L-G4LPE-G2P-G2LP
12070314	033	Internal dust shield 25	G4L-G4LPE-G2P-G2LP
12240113	034	Bearing 6205 2RS	G4L-G4LPE-G2P-G2LP
12070307	035	Spacer 25	G4L-G4LPE-G2P-G2LP
3030175	036	Washer 16	G4L-G4LPE-G2P-G2LP
3020204	037	Self locking nut 16 MA	G4L-G4LPE-G2P-G2LP
12070315	038	External dust shield 16	G4L-G4LPE-G2P-G2LP
12070311	039	Wheel rim	G4L-G4LPE-G2P-G2LP
12070313	040	Tire 15.600.6	G4L-G4LPE-G2P-G2LP
12070312	041	Air tube 15.600.6	G4L-G4LPE-G2P-G2LP
12170103	042	Complete wheel 15.600.6	G4L-G4LPE-G2P-G2LP
12880506	043	Spring cylinder pin	G4L-G4LPE
18031508	044	Fixed wheel axle	G4L-G4LPE-G2P-G2LP
12060901	045	Terminal pin 35 x 240	G4L-G4LPE-G2P-G2LP
3080129	046	Roll pin 10 x 70	G4L-G4LPE-G2P-G2LP
18030675	047	Protection guard	G4L
18031122	047A	External-Front Protection guard	G4LPE
3030701	048	Lock. washer Ø 10	G4L-G4LPE-G2P-G2LP
3011256	049	Screw TE 10 x 20	G4L-G4LPE
3011268	049A	Screw TE 12 x 20	G4L-G4LPE
18030677	050	Left internal protection guard	G4L
18030678	050A	Left internal protection guard	G4LPE
18030679	051	Right internal protection guard	G4L
18030680	051A	Right internal protection guard	G4LPE
18030681	052	Cylinder spring tube 60,3 x 5	G4L-G4LPE
11010513	053	Cylinder spring 40 x 431 x 6	G4L
11010526	053A	Cylinder spring Ø 40 L.461 F.7,5	G4LPE
18030682	054	Cylinder spring tube	G4L-G4LPE
18030683	055	Compl. cylinder spring assemb.	G4L
18030684	055A	Compl. cylinder spring assemb.	G4LPE
12880505	056	Hyd. and spring cylinder pin	G4L-G4LPE
12880512	057	Washer 15 x 30 x 5	G4L-G4LPE
3030705	058	Schnor washer Ø 14	G4L-G4LPE
3020215	059	Self locking nut 14 x 1,5	G4L-G4LPE
3080102	060	Roll pin 6 x 36	G4L-G4LPE
3011620	061	Screw T E 12 x 75	G4L-G4LPE
3010217	062	Screw T E 12 x 60	G4L-G4LPE
18030685	063	L. safety loop	G4L-G4LPE
3030168	064	Flat washer M 20	G4L-G4LPE

G4L - G4LPE TAB. 4 Code 19010188

Spare Parts Code	Pos.	Description	Models - Reference
18030689	065	R. safety loop	G4L-G4LPE
3030177	066	Lock washer M 12	G4L-G4LPE
18030686	067	Hydr. cylinder 60 stroke 277	G4L-G4LPE
3030403	068	Copper washer 17 x 23 x 1,5	G4L-G4LPE
3011605	069	Drilled screw 3/8 G.	G4L-G4LPE
12070320	070	Complete delivery hyd. hose 3/8 L. 300	G4L-G4LPE
12070321	071	Complete delivery hyd. hose 3/8 L. 600	G4L-G4LPE
4010902	072	TEE 1/2 G	G4L-G4LPE
12760410	073	Hyd. hose 3/8 L. 2400	G4L-G4LPE
4010213	074	Male nipple 1/2-3/8 G.	G4L-G4LPE
3030405	075	Copper washer	G4L-G4LPE
4011804	076	Quick coupler push-pull 1/2	G4L-G4LPE
12880507	077	Hyd. and spring cylinder pin	G4L-G4LPE
18031103	078	Pivot wheel attachment	G4L-G4LPE-G2P-G2LP
11010603	079	Spring	G4L-G4LPE-G2P-G2LP
12880504	080	Locking handle	G4L-G4LPE-G2P-G2LP
3080103	081	Spring pin 6 x 40	G4L-G4LPE-G2P-G2LP
3011209	082	Screw TE 10 x 25	G4L-G4LPE-G2P-G2LP
3030159	083	Washer M 10	G4L-G4LPE-G2P-G2LP
18031101	084	Crazy wheel axle R.	G4L-G4LPE-G2P-G2LP
18031102	084A	Crazy wheel axle L.	G4L-G4LPE-G2P-G2LP
18030687	085	Cylinder head pin brack. R.	G4L-G4LPE
3010909	086	Screw TPSEI 10 x 20	G4L-G4LPE
4010702	087	Clamp 80 ÷ 100	G4L-G4LPE-G2P-G2LP
9070101	088	Protection guard	G4L-G4LPE-G2P-G2LP
18030690	089	Cylinder head pin brack. L.	G4L-G4LPE
12070323	090	Cylinder	G4L-G4LPE
12760411	091	Complete delivery hyd. hose 3/8" LG. 2400	G4L-G4LPE
12070317	092	Piston head 50 x 40	G4L-G4LPE
10010623	093	O. Ring cat. 119	G4L-G4LPE
10010618	094	Seal D.B.M. 196133	G4L-G4LPE
12070318	095	Shaft Ø 30	G4L-G4LPE
10010622	096	O. Ring cat. 826	G4L-G4LPE
12070319	097	Shaft ring nut 60 x 43	G4L-G4LPE
10010619	098	Balsele seal (B. 157118)	G4L-G4LPE
10010620	099	Seal W.R.M. 118149	G4L-G4LPE
10010621	100	Seals kit	G4L-G4LPE
11010514	101	Spring	G4L-G4LPE
18030692	102	Safety attachment	G4L-G4LPE


TAB. 4

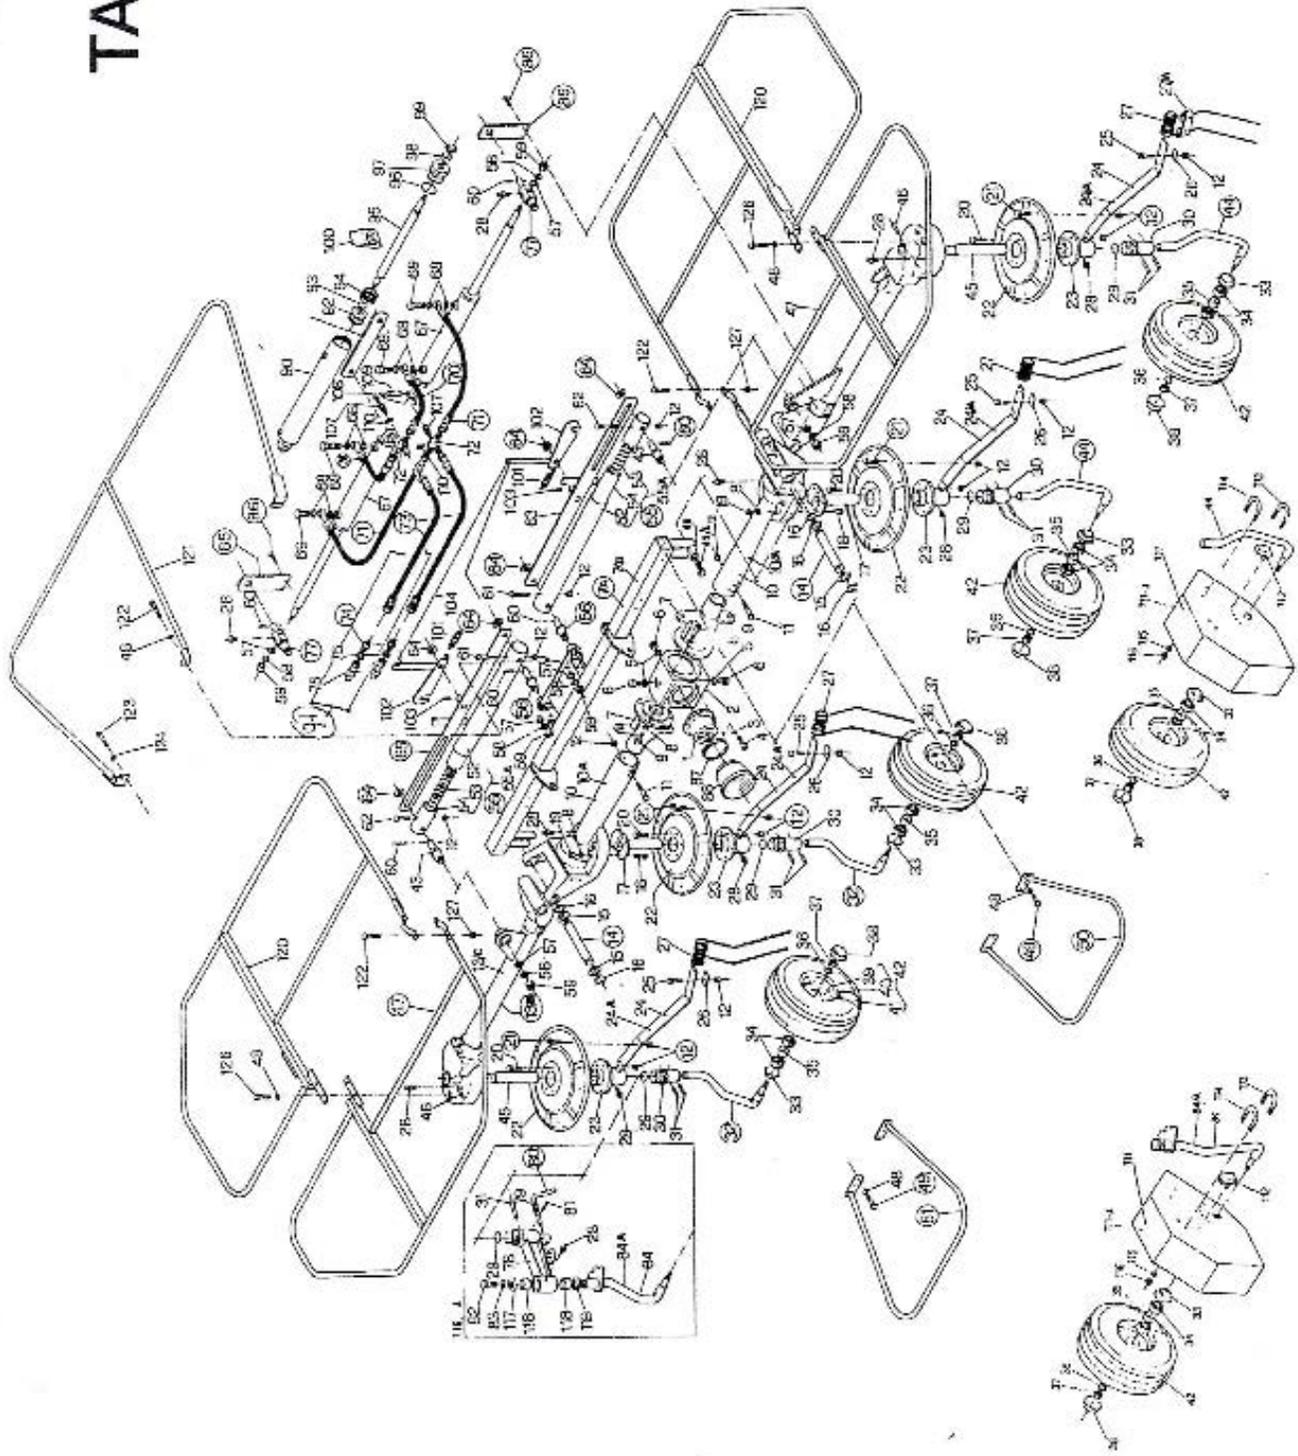

G4L - G4LPE TAB. 4 Code 19010188

Spare Parts Code	Pos.	Description	Models - Reference
3080103	103	Spring pin 6 x 40	G4L-G4LPE-G2P-G2LP
9130006	104	Rope	G4-G4LPE
	105		
	106		
4010910	107	Straight joint	G4-G4LPE
4010509	108	Elbow joint	G4-G4LPE
4021202	109	One way valve 1/4 G.	G4-G4LPE
3030406	110	Copper washer 1/4 - 13 x 19 x 1,5	G4-G4LPE
18031505	111	Right fender	OPTIONAL G4-G4LPE
18031506	111A	Left fender	OPTIONAL G4L-G4LPE
18030614	112	Spacer	G4-G4LPE
18030615	113	Long bracket	G4-G4LPE
18030608	114	Short bracket	G4-G4LPE
3030156	115	Flat washer 8 uni 6592	G4L-G4LPE
3020209	116	Self locking nut 8MA	G4L-G4LPE-G2P-G2LP
18031104	117	Washer 55-11-6	G4L-G4LPE-G2P-G2LP
12240152	118	Glycodur bearing 30-34-30 F	G4L-G4LPE-G2P-G2LP
12280203	119	Glycodur washer 32 x 50 x 1,5	G4L-G4LPE-G2P-G2LP
18031121	120	External Rear Protection guard	G4LPE
18031120	121	Central Rear Protection guard	G4LPE
3011206	122	Screw TE 10 x 30	G4L-G4LPE
3011255	123	Screw TE 12 x 25	G4L-G4LPE
3030703	124	Lock Washer Diam. 12	G4L-G4LPE
	125		
	126		
3020201	127	Self Locking Nut 10 MA	G4L-G4LPE

TAB. 5

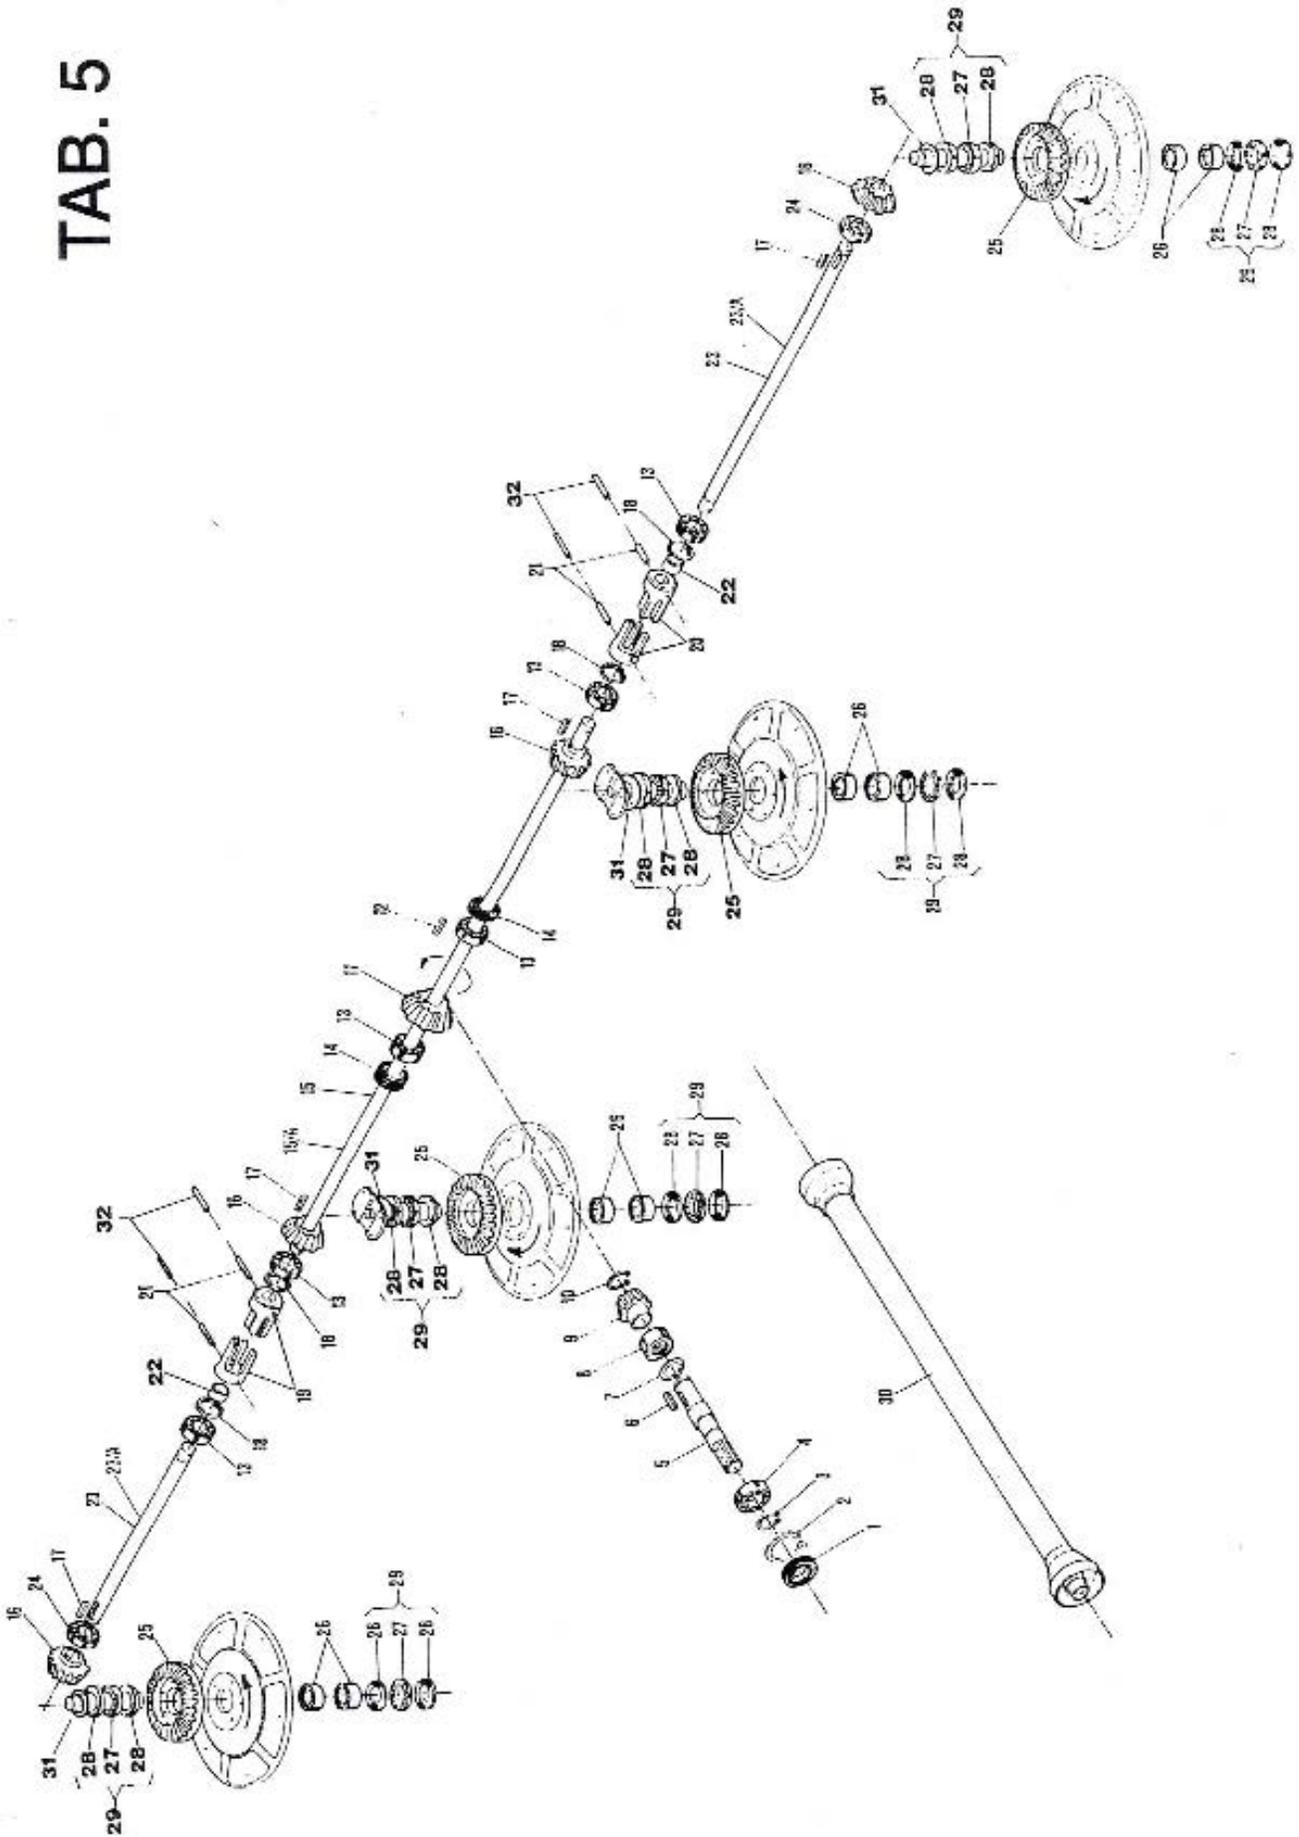


Spare Parts Code	Pos.	Description	Models - Reference
12260003	01	Oil seal 35.72.10	G4L-G4LPE-G2P-G2LP
3120105	02	Snap ring I 72 7437-75	G4L-G4LPE-G2P-G2LP
3120102	03	Snap ring E 35 7435-75	G4L-G4LPE-G2P-G2LP
12240109	04	Bearing 6207	G4L-G4LPE-G2P-G2LP
12320301	05	Shaft for P.T.O.	G4L-G4LPE-G2P-G2LP
3110003	06	Key 8 x 7 x 40	G4L-G4LPE-G2P-G2LP
3120120	07	Spring ring BR 52 INA	G4L-G4LPE-G2P-G2LP
12070302	08	Roller bush HK4520	G4L-G4LPE-G2P-G2LP
8010302	09	Bevel pinion gear Z 16	G4L-G4LPE-G2P-G2LP
3120101	10	Snap ring E 30 7435-75	G4L-G4LPE-G2P-G2LP
8010304	11	Ring bevel gear Z 23	G4L-G4LPE-G2P-G2LP
3110002	12	Key 8 x 7 x 35	G4L-G4LPE-G2P-G2LP
12240108	13	Bearing 6206 2RS	G4L-G4LPE-G2P-G2LP
12260002	14	Oil seal 30.55.10	G4L-G4LPE-G2P-G2LP
12010203	15	Central shaft	G4L
12010204	15A	Central shaft	G4LPE
8010303	16	Bevel pinion Z 17	G4L-G4LPE-G2P-G2LP
3110008	17	Key 8 x 7 x 30	G4L-G4LPE
3120108	18	Snap ring I-62	G4L-G4LPE
18030693	19	Right coupling joint	G4L-G4LPE
18030694	20	Left coupling joint	G4L-G4LPE
3080135	21	Roll pin 10 x 70 heavy uni 6873/71	G4L-G4LPE-G2P-G2LP
18030700	22	Spacer 38 L. 24,5	G4L-G4LPE
12010101	23	Lateral shaft Ø 30 L. 727	G4L
12010102	23A	Lateral shaft Ø 30 L. 1027	G4LPE
12240102	24	Taper roller bearing 6006	G4L-G4LPE-G2P-G2LP
18030655	25	Ring bevel gear Z 34	G4L-G4LPE-G2P-G2LP
12070301	26	Roller bush HK 3520	G4L-G4LPE-G2P-G2LP
12270001	27	Axial housing AXK 3552	G4L-G4LPE-G2P-G2LP
12280001	28	Axle thrust bearing AS 3552	G4L-G4LPE-G2P-G2LP
18030656	29	Complete axle cage (AXK + AS)	G4L-G4LPE-G2P-G2LP
8020412	30	Cardan shaft	G4L-G4LPE
3120126	31	Flat washer from 0,3 to 0,5 mm	G4L-G4LPE-G2P-G2LP
3080136	32	Roll pin 6 x 70 heavy 68-73-71	G4L-G4LPE-G2P-G2LP

P.T.O SHAFT BREAKDOWN DRAWINGS



P.T.O FOR PULL TYPE MOD. - POS. 100

R107121UCN0/002

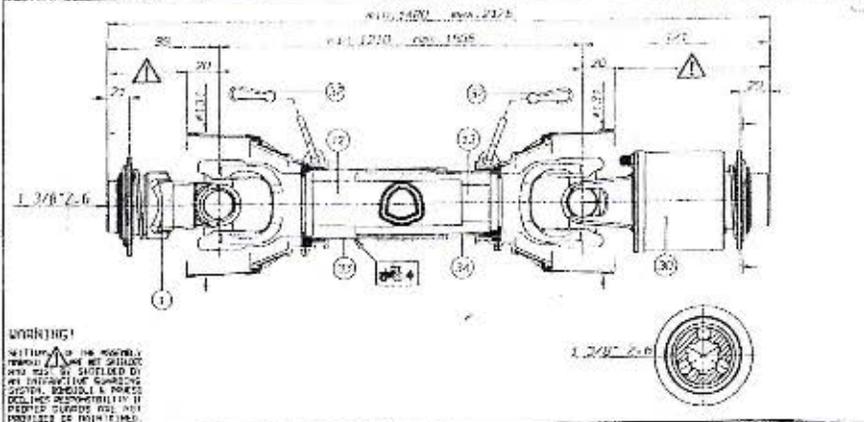

P.T.O FOR 3° POINT HITCH MOD. - POS. 101

R107101UCN0/002

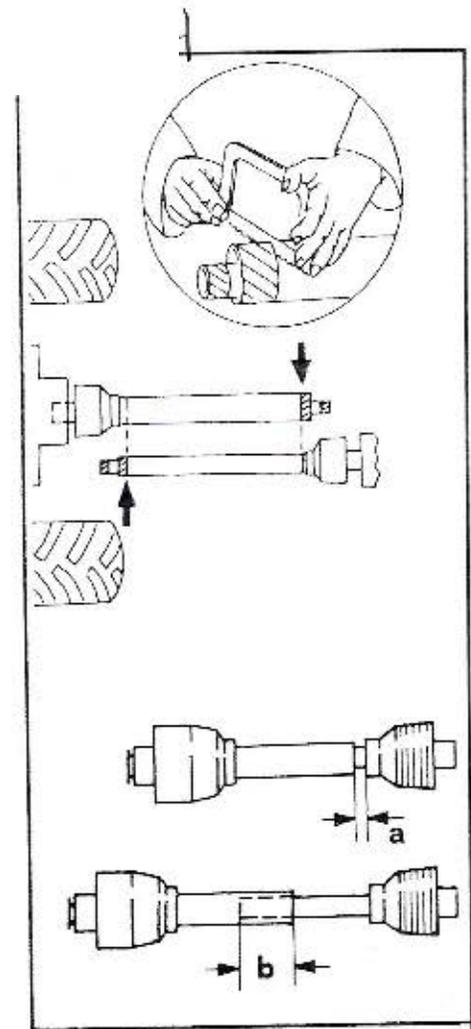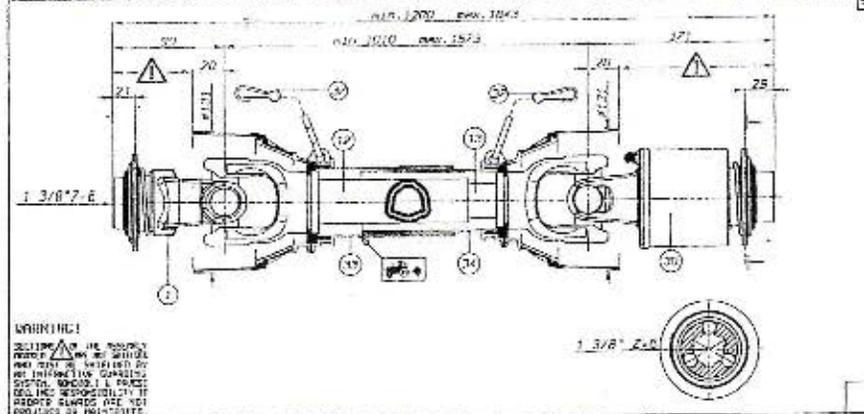

Adapting P.T.O. shaft

Sometimes it is necessary to shorten P.T.O. shafts according to type of tractor with which unit is used.

First check length before operating.

- Separate two shaft sections and fit same to P.T.O. shaft end of tractor and other to machine side. Slip clutch must be on machine side. This operation must be carried out with unit hooked up to tractor.
- Overlap two shaft sections and make sure safety tolerances are respected both when three point hitch is lowered or lifted. See above drawing. Minimum tolerance must be 150 mm. (B) when P.T.O. shaft is open. Minimum tolerance, when closed, should be 20 mm.
- If shortening is necessary cut off sliding and protection tubes uniformly.
- Trim tube ends, remove all swarfs and abundantly grease all sliding surfaces.

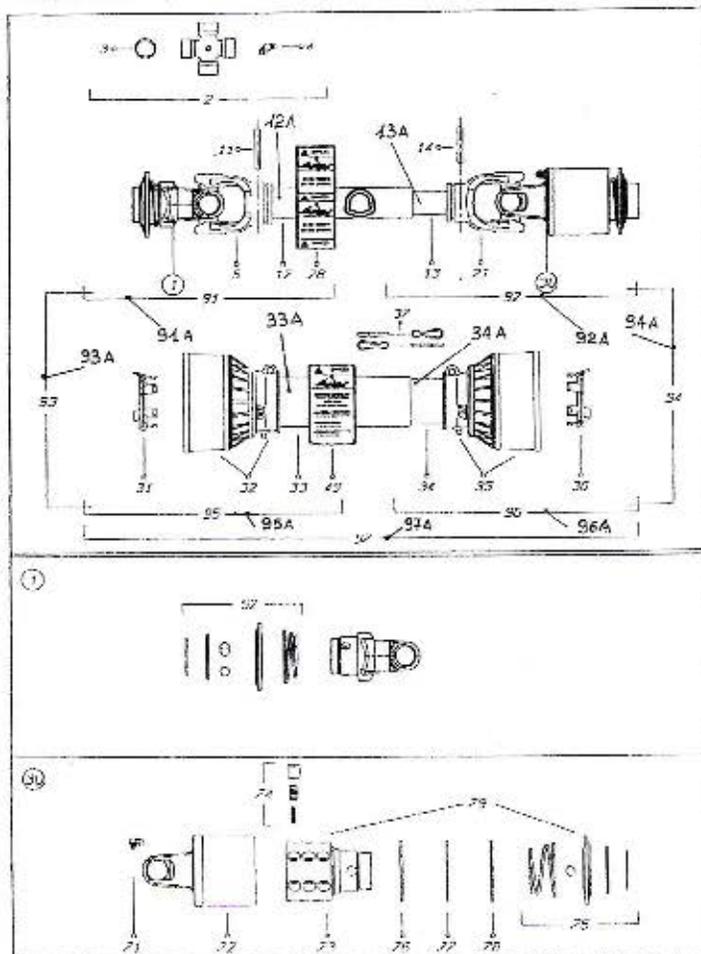


TABLE 6

G4L - G4LPE TAB. 6 Code 19010192 - P.T.O. SPARE PARTS

Code	Pos.	Description	Models - Reference
001	12881166	Yoke S2	G4L-G4LPE - G4LP-UJ
002	12880702	Cross journal ass.	G4L-G4LPE - G4LP-UJ
003	12880703	Circlip	G4L-G4LPE - G4LP-UJ
004	12880704	Grease nipple	G4L-G4LPE - G4LP-UJ
005	12880705	Outer tube yoke	G4L-G4LPE - G4LP-UJ
011	12880706	Flexible pin	G4L-G4LPE - G4LP-UJ
012	12881167	Cardan tube	ONLY PULL TYPE G4L-G4LPE - G4LP-UJ
013	12881168	Cardan tube	ONLY PULL TYPE G4L-G4LPE - G4LP-UJ
014	12880709	Flexible pin	G4L-G4LPE - G4LP-UJ
021	12880710	Inner tube yoke	G4L-G4LPE - G4LP-UJ
028	12881153	Label with danger	G4L-G4LPE - G4LP-UJ
030	12881154	LS 3/2 900 Nm. RT	G4L-G4LPE - G4LP-UJ
031	12880712	Shield support 2	G4L-G4LPE - G4LP-UJ
032	12880713	O. cone sets F1-2	G4L-G4LPE - G4LP-UJ
033	12881169	Safety tube	ONLY PULL TYPE G4L-G4LPE - G4LP-UJ
034	12881170	Safety tube	ONLY PULL TYPE G4L-G4LPE - G4LP-UJ
035	12880716	I. cone sets F1-2	G4L-G4LPE - G4LP-UJ
036	12880717	Shield support	G4L-G4LPE - G4LP-UJ
037	12880718	Complete chain	G4L-G4LPE - G4LP-UJ
049	12881157	Label with greaser	G4L-G4LPE - G4LP-UJ
052	12881158	Locking kit	G4L-G4LPE - G4LP-UJ
071	12881179	Greaser 8x1 25x90	G4L-G4LPE - G4LP-UJ
072	12881303	LS3 Body + Fork	G4L-G4LPE - G4LP-UJ
073	12881304	Hub LS3/LC3 M1 3/8	G4L-G4LPE - G4LP-UJ
074	12881182	Ratchet with spring	G4L-G4LPE - G4LP-UJ
075	12881183	Locking kit	G4L-G4LPE - G4LP-UJ
076	12881184	Closing plate	G4L-G4LPE - G4LP-UJ
077	12881185	Dust shield	G4L-G4LPE - G4LP-UJ
078	12880739	Circlip	G4L-G4LPE - G4LP-UJ
079	12881305	Assembled hub	G4L-G4LPE - G4LP-UJ
091	12881171	External S. 102	ONLY PULL TYPE G4L-G4LPE - G4LP-UJ
092	12881172	Internal shaft 102	» » » G4L-G4LPE - G4LP-UJ
093	12881173	External shaft 102	» » » G4L-G4LPE - G4LP-UJ
094	12881174	Internal S. 102	» » » G4L-G4LPE - G4LP-UJ
095	12881175	External s. shield	» » » G4L-G4LPE - G4LP-UJ
096	12881176	Internal safety s.	» » » G4L-G4LPE - G4LP-UJ
097	12881177	Complete s. shield	» » » G4L-G4LPE - G4LP-UJ
100	8020430	Cardan shaft	» » » G4L-G4LPE - G4LP-UJ
101	8020429	Cardan shaft	3" POINT HITCH MODEL G4L-G4LPE - G4LP-UJ
12A	12881151	Cardan tube	» » » G4L-G4LPE - G4LP-UJ
13A	12881152	Cardan tube	» » » G4L-G4LPE - G4LP-UJ
33A	12881155	Safety tube	» » » G4L-G4LPE - G4LP-UJ
34A	12881156	Safety tube	» » » G4L-G4LPE - G4LP-UJ
91A	12881159	External shaft 102	» » » G4L-G4LPE - G4LP-UJ
92A	12881160	Internal shaft 102	» » » G4L-G4LPE - G4LP-UJ
93A	12881161	External shaft 102	» » » G4L-G4LPE - G4LP-UJ
94A	12881162	Internal shaft 102	» » » G4L-G4LPE - G4LP-UJ
95A	12881163	External safety	» » » G4L-G4LPE - G4LP-UJ
96A	12881164	Internal safety s.	» » » G4L-G4LPE - G4LP-UJ
97A	12881165	Complete safety s.	» » » G4L-G4LPE - G4LP-UJ